

# Z-PC-LINE **Z-D-IO**

8-CH 6 Digital input / 2 Digital output control module // RS485

**Z-PC LINE**

Special modules



- ▶ INPUT: N.6 Digital Input (reed, Proximity, PNP, NPN, contact, etc.)
- ▶ OUTPUT: N.2 Digital Output (SPST relays, 5A, 250Vac)
- ▶ FUNCTIONS:
  - I/O slave mode
  - Motor control mode
  - Pneumatic valve control mode
  - Motorised valve control mode
- ▶ Easy Dip-switch settings for function type
- ▶ Galvanic isolation @ 3,75 KV
- ▶ Screw-fit terminals removable
- ▶ Din rail mounting
- ▶ Power supply: 10..40 Vdc, 19..28 Vac



## TECHNICAL SPECIFICATIONS

### Z-D-IO - 8-CH 6 Digital input / 2 Digital output control module // RS485



#### SERIAL LINE ACCESSORIES

- **K107A** – RS485 ↔ RS485 isolator repeater
- **K107B** – RS232 ↔ RS485 converter
- **K107USB (S107USB)** – USB ↔ RS485 converters din rail mounting or portable version (S107USB)

#### GENERAL FEATURES

<b>Power supply</b>	10÷40Vdc, 19÷28 Vac
<b>Channels</b>	N.6 DI, N.2 DO
<b>Status indicators</b>	- Power - Fail - Communication on Rs485
<b>Galvanic Isolation</b>	-Output/Power supply and Output/Input at 3750 Vac - others at 1.500 Vac
<b>Hot swapping</b>	Yes
<b>Power consumption</b>	max 2,0 W
<b>Protections for inputs</b>	Against Surges: up to 4kV
<b>Humidity</b>	30..90% a +40°C (not condensing)
<b>Mounting</b>	35 mm DIN 46277

#### ORDER CODE

**Cod. Z-D-IO**

#### Accessories & Software

- **Cod. Z-PC-DINAL** – terminal block for power & RS485 communication
- **Cod. Z-PC-DIN2** – 2 slot block
- **Cod. Z-PC-DIN4** – 4 slot block
- **Cod. Z-PC-DIN8** – 8 slot block
- **Z-PROG / Z-NET3** - configuration software downloading from [www.seneca.it](http://www.seneca.it)
- **PM001600** – programming cable (DB9 / jack stereo)

<b>Design</b>	Terminal housing for mounting on 35 mm DIN 46277
<b>Data memory</b>	EEPROM for all configuration data; storage time: 10 years.
<b>DIP Switch</b>	- Function type - alarm
<b>Enclosure</b>	"V0" self-extinguishing glass filled nylon case
<b>Dimensions</b>	17,5 x 100 x 112 mm (w x h x d)
<b>Weight</b>	150 g
<b>Operating temperature</b>	0..+55 °C
<b>Connections</b>	Plug-in screw clamp terminal blocks, wires up to 2.5 mm <sup>2</sup>
<b>IP Protection</b>	IP 20
<b>Standards</b>	EN50081-2 EN50082-2 EN61010-1
<b>Approvals</b>	CE, Rina


#### INPUT / OUTPUT

**6 opto-isolated inputs** for REED, PROXIMITY PNP, NPN, contact, etc. - Internal jumper for selecting internal or external power supply for the inputs.  
**2 SPST relay outputs** with common contact, capacity 5A 250Vac. Internal jumpers for selecting an NO or NC contact for each relay

#### INTERFACE

**Rs485 Modbus RTU slave:** 1200...115200 baud rate

#### FUNCTIONS

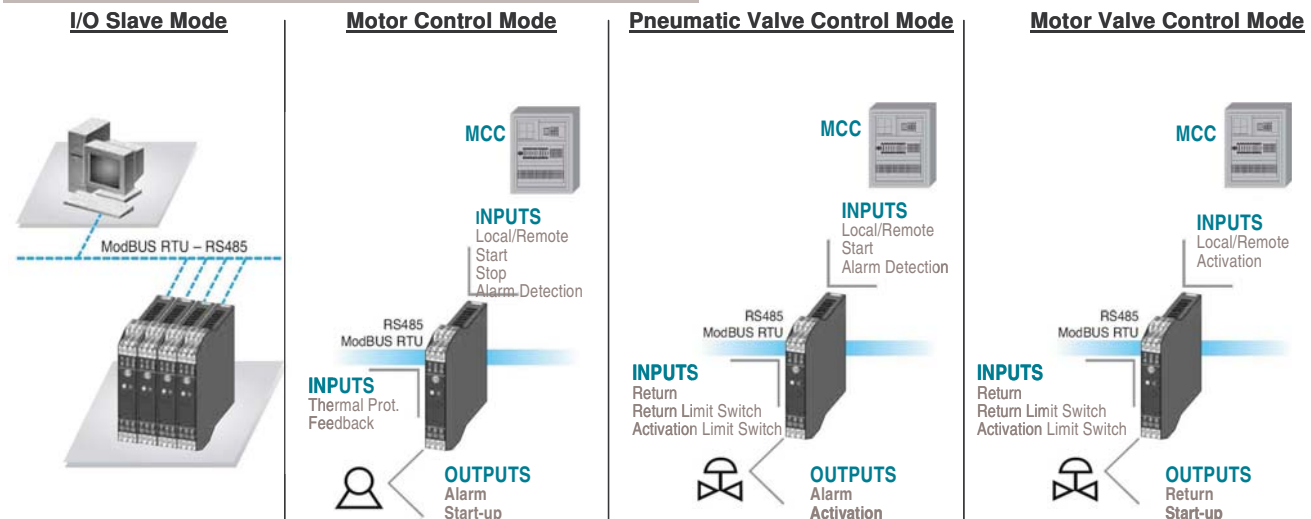

# Z-PC Line

## Z-D-IO

MODULE: 6 DIGITAL INPUTS, 2 RELAY OUTPUTS, MODBUS COMMUNICATION ON RS485

### Installation Manual



- Contents:**
- General characteristics
  - Technical specifications
  - Installation rules
  - Electrical connections
  - Digital inputs
  - Digital outputs
  - DIP-switch settings
  - Modbus connections rules
  - Module configuration
  - Alarm delay DIP-Switch (SW2-3 e SW2-4)
  - Logical schemes
  - LEDs Signallings
  - Factory settings

**SENECA s.r.l.**  
Via Germania, 34 - 35127 - Z.I. CAMIN - PADOVA - ITALY  
Tel. +39.049.8705355 - 8705359 - Fax +39.049.8706287  
For a manual and configuration software, see [www.seneca.it](http://www.seneca.it)

This document is property of SENECA s.r.l. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice. Content of this documentation is subject to periodical revision.

### General Specifications

- 6 opto-insulated digital inputs with a common contact. Internal or external power supply of inputs selectable with a jumper.
- Protection of inputs by TVS 600 W/ms transient suppressors.
- Insulation of the 1500 Vac inputs with respect to the remaining low voltage circuits.
- 2 SPST relay outputs with common contact, capacity of 2 AAC1 250 Vac. Selection of N.O. or N.C. contact for each relay with a jumper.
- 3750 Vac insulation between the outputs and the remaining low voltage circuits.
- Internal logic for commanding motors, pneumatic valves and motorised valves, with management of thermal protection, feedback, travel limit and alarm.
- RS485 serial communication with Modbus-Rtu protocol, 64 nodes maximum (without repeater). Configurable via dip-switch also.
- Communication times shorter than 10 ms (@ 38400 Baud).
- Connection distance up to 1200 m.
- Pull-out terminals, with 2.5 mm<sup>2</sup> cross-section
- Facilitated wiring of power supply and serial connection by means of a bus which can be housed in the DIN guide.
- Module can be fitted on and removed from bus without interrupting communication or power supply to the system.

### Technical specifications

INPUTS	
Type input	Reed, Contact, Proximity PNP, NPN (with external resistor) etc...
Number of Channels	6
Discrimination limits	according to IEC1131.2 tipo 1
Transition level	10 Vac, 3 mA ± 10%
Minimum pulse lenght	20 ms
OUTPUTS	
Outputs	2 SPST relay outputs with common contact, capacity 5A <sub>ac</sub> , 250Vac. Internal jumpers for selecting an NO or NC contact for each relay.
Number of Channels	2
Operate / release time delay	5/2 ms

POWER SUPPLY	
Voltage	10 ..40 V <sub>dc</sub> 19 ..28 V <sub>ac</sub> a 50 ..60 Hz
Consumption	Typical: 1.5 W, Max: 2.5 W
ENVIRONMENTAL CONDITION	
Temperature	-10 ..+65°C
Humidity	30 ..90% a 40°C non condensing
Altitude	Up to 2000 m a.s.l.
Storage Temperature	-20 ..+85°C
Protection	IP20

CONNECTIONS	
Connections	Removable 3-way crew terminals, 3,5 pitch Rear IDC10 connector for DIN 46277 rail


DIMENSIONS / BOX	
Dimensioni	L: 100 mm; H: 112 mm; W: 17.5 mm
Contenitore	PBT, colore nero

ISOLATIONS		STANDARDS	
1500 Vac a tre punti:		<b>The module complies with the following standards:</b>	
CPU	Digital Inputs	<p><b>EN61000-6-4/2002-10</b> (electromagnetic emission, industrial environment).</p> <p><b>EN61000-6-2/2006-10</b> (electromagnetic immunity, industrial environment)</p> <p><b>EN61010-1/2001</b> (safety). All circuits must be isolated from the other circuits under dangerous voltage with double isolation. The power supply transformer must comply with En60742: "Isolated transformers and safety transformers".</p>	
Power supply	Digital Outputs		
: Isolations 1500 V			

**ADDITIONAL NOTES :**  
Use in Pollution Degree 2 Environment .  
Power Supply must be Class 2.  
When supplied by an Isolated Limited Voltage/Limited Current power supply a fuse rated max 2.5A shall be installed in the field.

### Installation Rules


The module is designed to be installed in vertical position on a DIN 46277 rail. In order to ensure optimum performance and the longest working life, the module(s) must be supplied adequate ventilation and no raceways or other objects that obstruct the ventilation slots. Never install modules above sources of heat; we recommend installation in the lower part of the control panel.

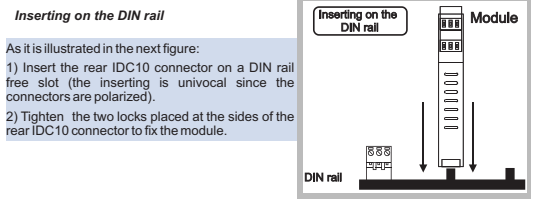


### Electrical Connections

#### POWER SUPPLY AND MODBUS INTERFACE

Power Supply and CAN/MODBUS interface are available by using the bus for the Seneca DIN rail, by the rear IDC10 connector or by Z-PC-DINAL2-17.5 accessory.

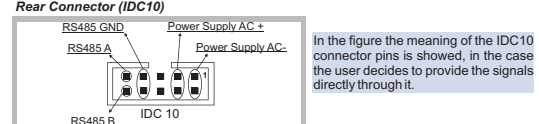


#### Z-PC-DINAL2-17.5 Accessory Use

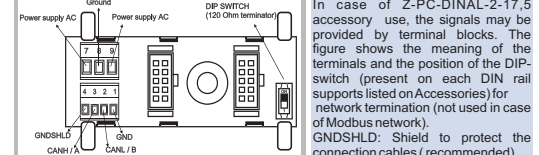

### Modbus connection rules

- 1) Install the modules on the DIN rail (max 120).
- 2) Connect the remote modules using cables of proper length. On the table the following data about the cables length are provided:  
-Bus Length: Modbus network maximum length as a function of the Baud rate. It is the length of the cables which connect the two bus terminators modules (see Scheme 1).  
-Drop Length: maximum length of a drop line 2 m (see Scheme 1).

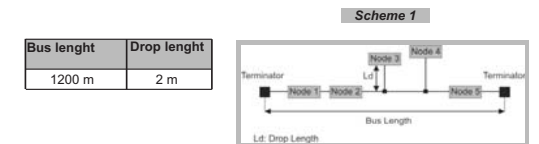

For the best performances, the use of special shielded cables is recommended (BELDEN 9841 cable for example).

### DIP-switch settings

The DIP-switches position defines the module Modbus communication parameters: Address and Baud Rate. In the following figure the Baud Rate and Address values are listed as a function of the DIP-switches position:

### DIP SWITCH STATUS

POSITION	BAUD RATE	POSITION	ADDRESS	POSITION	TERMINATOR
00xxxxxx	9600	xx000001	# 1	none	See J4
01xxxxxx	19200	xx000010	# 2	none	See J4
10xxxxxx	38400	.....	.....		
11xxxxxx	57600	xx111111	# 63		


  

POSITION	BAUD RATE	POSITION	ADDRESS
xx000000	From EEprom	xx000000	From EEprom


**Note:** when switches from 3 to 8 are in OFF, communication settings are retrieved from EEprom

### Digital Inputs


Sensors REED, PROXIMITY PNP, NPN, contact, can be connected to the input terminals. The power supply to these sensors can be obtained directly from the Z-D-IO Module (factory configuration), or it can be externally supplied.  
Procedure for modifying the configuration of the inputs: open the side lid and shift the configuration jumper J1 to position Int for internal power supply, or in position Ext for external power supply (see fig. 2).

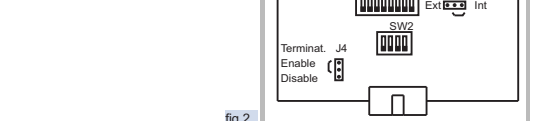

#### Internal Power supply

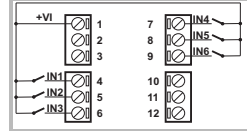


#### External Power supply

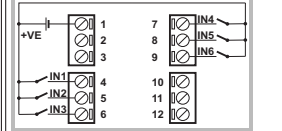

For the meanings of the inputs, see section "Module Configuration".

### Digital outputs

The relay outputs can be configured to use the NO contact (factory configuration), or the NC contact. To change the output configuration, open the side lid and shift the configuration jumpers J2 and J3 (see fig. 2).



### Module configuration (SW2)

The module can be configured by the SW2 Dip-switch in order to function in four different operating modes:

- I/O MODE
- MOTOR COMMAND MODE
- PNEUMATIC VALVE COMMAND MODE
- MOTORISED VALVE COMMAND MODE

### I/O MODALITY

INPUTS			OUTPUTS		
Terminal	Meaning	Type	Terminal	Meaning	Type
4 - 1	IN 1	N.O.	10 - 12	OUT 1	N.D. (**)
5 - 1	IN 2	N.O.	11 - 12	OUT 2	N.D. (**)
6 - 1	IN 3	N.O.	<b>SETTING OF DIP-SWITCH SW2</b>		
7 - 1	IN 4	N.O.			
8 - 1	IN 5	N.O.			
9 - 1	IN 6	N.O.			

### MOTOR COMMAND MODE

INPUTS			OUTPUTS		
Terminal	Meaning	Type	Terminal	Meaning	Type
4 - 1	Local / Remote	N.O.	10 - 12	Alarm	N.E. (**)
5 - 1	Start (*)	N.O.	11 - 12	Start	N.D. (**)
6 - 1	Stop (*)	N.C.	<b>SETTING OF DIP-SWITCH SW2</b>		
7 - 1	Thermal protection	N.C.			
8 - 1	Feedback	N.O.			
9 - 1	Silence alarm	N.O.			

### PNEUMATIC VALVE COMMAND MODE

INPUTS			OUTPUTS		
Terminal	Meaning	Type	Terminal	Meaning	Type
4 - 1	Local / Remote	N.O.	10 - 12	Alarm	N.E. (**)
5 - 1	Activation (*)	N.O.	11 - 12	Start	N.D. (**)
6 - 1	Return (*)	N.C.	<b>SETTING OF DIP-SWITCH SW2</b>		
7 - 1	Return Travel-Limit	C.I.P.(***)			
8 - 1	Activation Travel-Limit	C.I.P.(***)			
9 - 1	Silence alarm	N.O.			

### MOTORISED VALVE COMMAND MODE

INPUTS			OUTPUTS		
Terminal	Meaning	Type	Terminal	Meaning	Type
4 - 1	Local / Remote	N.O.	10 - 12	Return	N.D. (**)
5 - 1	Activation (*)	N.O.	11 - 12	Start	N.D. (**)
6 - 1	Return (*)	N.C.	<b>SETTING OF DIP-SWITCH SW2</b>		
7 - 1	Return Travel-Limit	C.I.P.(***)			
8 - 1	Activation Travel-Limit	C.I.P.(***)			
9 - 1	Not used	N.O.			

(\*) These commands are effective only if the Local / Remote input is in Local position (open contact). If the Local / Remote input is in Remote position (closed contact), the respective commands are sent to the module by writing in the respective registers.

(\*\*) N.D. = Normally de-energised relay. N.E. = Normally energised relay.  
(\*\*\*) CIP = Closed in position

### MOTORS COMMAND LOGIC (in LOCAL mode)

To start the motor, close the "START" input. The module controls if the "THERMAL PROTECTION" and "STOP" inputs are closed - in this situation it enables the "START" output.  
After the programmed time (see DIP-switches SW2-3 and 4 and modbus 40005 register) the closure of the "FEEDBACK" input is verified. If still open, the module enables the "ALARM" output (the "START" output remains enabled).  
If the "THERMAL PROTECTION" input opens during operation, the "ALARM" output is immediately enabled, and the "START" output is disabled.  
To silence the alarm, close the "SILENCE ALARM" input.  
To stop the motor, open the "STOP" input - the module disables the "START" output.  
The "FEEDBACK" input must open within the programmed time, otherwise the module enables the "ALARM" output.

### PNEUMATIC VALVE COMMAND LOGIC (in LOCAL mode)

To enable the pneumatic valve, close the "ACTIVATION" input. The module controls if the "RETURN" input is closed - in this situation it enables the "ACTIVATION" output.  
After the programmed time (see DIP-switches SW2-3 and 4 and modbus 40006 register), the opening of the "ACTIVATION TRAVEL-LIMIT" input is verified. If it is still closed, the module enables the "ALARM" output (the "ACTIVATION" output remains enabled).  
To silence the alarm, close the "SILENCE ALARM" input.  
If you open the "RETURN" input, the module disables the "START" output.  
The "RETURN TRAVEL-LIMIT" input must open within the programmed time, otherwise the module enables the "ALARM" output.  
An incongruous situation of the travel-limit devices (simultaneous opening of the two inputs "ACTIVATION TRAVEL-LIMIT" and "RETURN TRAVEL-LIMIT") immediately activates the "ALARM" output and lights up the "FAIL" LED.

## MOTORIZED VALVE COMMAND LOGIC (in LOCAL mode)

To enable the motorised valve, close the "ACTIVATION" input. The module controls if the "RETURN" input is closed, and in this situation, it disables the "RETURN" output, (if it was enabled) and enables the "ACTIVATION" output.

After the programmed time (see DIP-switches SW2-3 and 4 and modbus 40007 register), the opening of the "ACTIVATION TRAVEL-LIMIT" input is verified. If it is still closed, the module disables the "ACTIVATION" output and activates the alarm (Modbus and LED only).

If you open the "RETURN" input, the module disables the "ACTIVATION" output (if it was enabled), and enables the "RETURN" output.


After the programmed time, the opening of the "RETURN TRAVEL-LIMIT" input is verified - if it is closed, the module enables the alarm.

An incongruous situation of the travel-limit devices (simultaneous opening of the two inputs "ACTIVATION TRAVEL-LIMIT" and "RETURN TRAVEL-LIMIT") immediately activates the alarm (only modbus and LED).

### Alarm delay DIP-Switches (SW2-3 and SW2-4)

SW2-3 e SW2-4	Motor	Pneu. Valv.	Mot. Valv.
	Alarm delay from EEprom 10 s (default)	10 s (default)	10 s (default)
	Alarm delay "short"	4 s	15 s
	Alarm delay "medium"	5 s	30 s
	Alarm delay "long"	30 s	120 s

## Z-D-IO: PNEUMATIC VALVE LOGIC

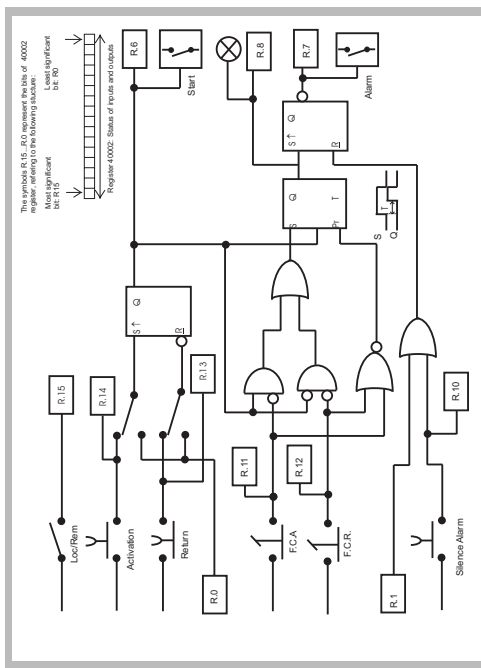

## LEDS Signallings

LED	STATE	Meaning of LEDES
PWR	On	Power supply presence.
FAIL	Blinking	Error settings.
	On	Fault/Failure.
RX	Blinking	Received data from RS485.
	On	Verify the connection.
TX	Blinking	Received data from RS485.
	On	Verify the connection.

### Factory settings

All DIP-switch OFF:

- Modbus protocol / Communication parameters: 38400, 8,N,1 Addr. 1
- Sensor power supply: INTERNAL
- Digital outputs: DISABLE
- Modality Type: I/O MODALITY
- Alarm delay: 10 s


Variations of standard parameters are possible by using configuration softwares Z-NET and EASY-Z-PC ([www.seneca.it](http://www.seneca.it)). For more information about a list of all register and their function consult the USER manual.



Disposal of Electrical & Electronic Equipment (Applicable throughout the European Union and other European countries with separate collection programs). This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical & electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of the product, please contact your local city office, waste disposal service of the retail store where you purchased this product.

### Logical schemes

## Z-D-IO : MOTOR CONTROL LOGIC

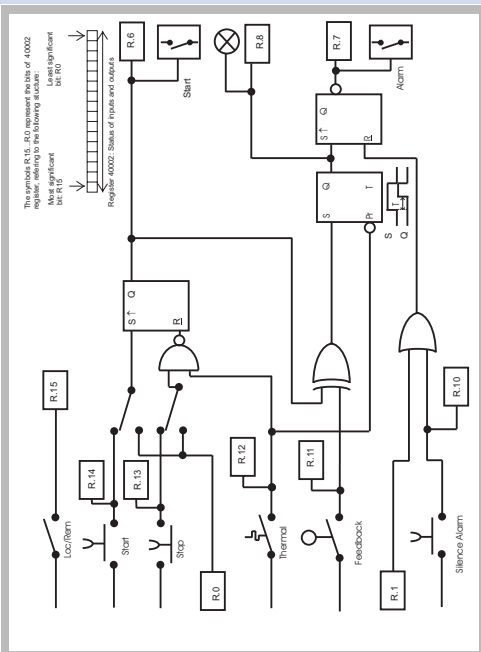

## Z-D-IO: MOTORIZED VALVE LOGIC

